



STREAM SPA

DRAINING VALVE LOCATION

To help you clean your spa, we've added a draining valve.



The drain is located directly under the door of the spa's outer shell, at ground level, when we're facing the keyboard.



DRAINAGE FREQUENCY

You should drain and refill your spa every one to three months depending on usage.
You should also replace the filter cartridge and wipe down the spa.