



## **STREAM SPA**

## DRAINING VALVE LOCATION

To help you clean your spa, we've added a draining valve.



The drain is located directly under the door of the spa's outer shell, at ground level, when we're facing the keyboard.



## **DRAINAGE FREQUENCY**

You should drain and refill your spa every one to three months depending on usage.
You should also replace the filter cartridge and wipe down the spa.